

Wiring of the A320 Sidestick handle

OVERVIEW

This instruction describes the wiring of a side stick handle.

The following functions need to be wired:

- Button Red push button
- Button Black front handle
- Axis Handle movement left and right
- Axis Handle movement up and down

SECURITY ADVICE

Please do not pull the black radio handle too hard to avoid damage to the handle.

INSTALLATION


Buttons have a two wires connector.

Connectors are plugged into the joystick card which is usually mounted to the sidestick mechanic.

The following example is made with a Leo Bodnar joystick card. Please connect wires accordingly.

Important:

In general the order of the cables on the joystick card is not important. Only make sure that handle movements cannot not interfere with cables.

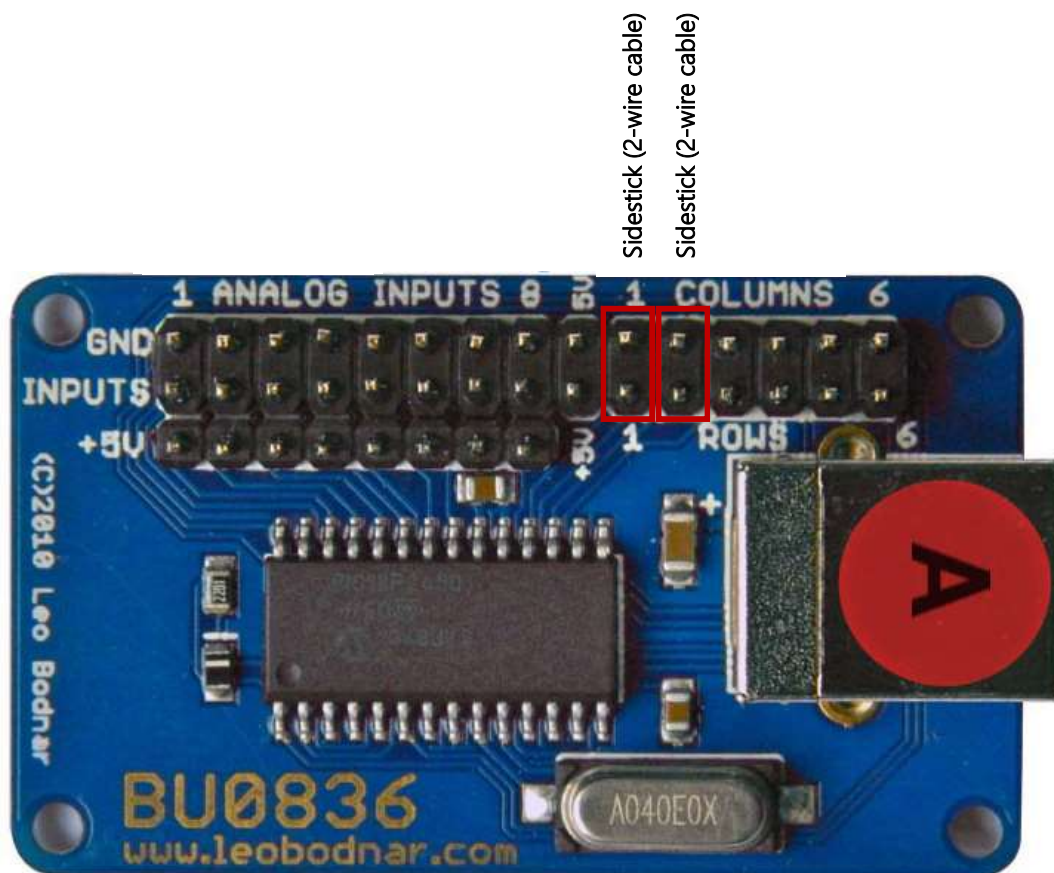

Once you have connected everything you need - connect to a PC or Mac using a standard USB A to B cable and the device will be recognised as a generic game device. You can then either calibrate or assign your controls using your chosen game or software as you would with any other game controller. That's it!

<http://www.leobodnar.com/products/BU0836A/BU0836A.pdf>

FURTHER QUESTIONS?

In case you need further help with assembly please write an email with a clear explanation and descriptive photos to our support desk: support@vier-im-pott.com